


**ENGLISH**

The Safe Turn Indicator is a small portable, automatic bicycle indicator that easily clips to a glove or a wristband.

- Contains 3 ultrabright L.E.D.s, it blinks similar to a motor vehicle.
  - Stays blinking as long as your hand is raised.
- Powered by 2xA76 size batteries that can be replaced.

**DIRECTIONS FOR USE**

1. Attach the Indicator firmly to the wristband provided or to your glove. Adjust it so that it is located correctly on your wrist (**see figure 1**).
2. To switch on ("stand-by mode"), press the orange top. To switch off, press again.
3. Rotate Indicator in a clockwise motion (**see figure 2**) to adjust the internal tilt switch to its correct position.
4. To test that the tilt switch is in the correct position, place your hand on the handlebars of your bicycle (*the Indicator should not flash*), then raise your hand to indicate a turn (*the Indicator should now flash*) (**see figure 3**). If necessary, continue to rotate the base until you find its correct position.
5. The Indicator will continue to flash for 1 second after returning your hand to the handlebar.
6. To extend the battery life, ensure that you switch off the Indicator after use.
7. Batteries can be replaced by lifting off the top ring to remove the orange top. Align the 3 raised markings found on the top ring, orange top and base to clip back into place correctly.

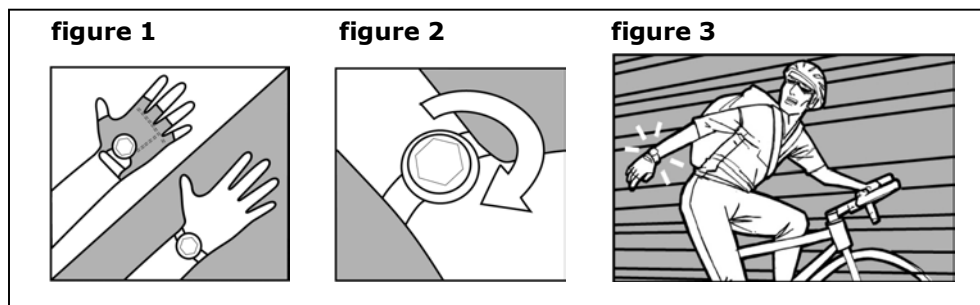

PLEASE NOTE: DO NOT ADJUST THE SAFE TURN INDICATOR WHILE IN MOTION. ALWAYS GIVE SUFFICIENT NOTICE TO SURROUNDING TRAFFIC BEFORE TURNING.

NOT INTENDED AS A REPLACEMENT OF YOUR BICYCLE LIGHTS OR REFLECTORS. USE ONLY AS DIRECTED. TO THE EXTENT PERMITTED BY LAW, SAFE TURN PTY LTD, ITS CONTRACTORS, AGENTS AND STAFF EXCLUDE ALL LIABILITY FOR ANY LOSS OR DAMAGE WHATSOEVER (INCLUDING SPECIAL, INDIRECT OR CONSEQUENTIAL LOSS OR DAMAGES) ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT, WHETHER AT COMMON LAW (INCLUDING IN CONTRACT AND IN TORT INCLUDING NEGLIGENCE), IN EQUITY, PURSUANT TO STATUTE OR OTHERWISE.